



INSTRUCTION MANUAL
GUIDE GEAR - TRIPOD PORTABLE GAME LIFT
(Model # 02-MKGMLFT-001)

WEIGHT CAPACITY: **500 lbs.**

WARNING!

- Completely read and follow this manual before assembling and using this product.
- **Never** modify or alter this product. Improper installation or adjustment may cause damage to property or serious personal injury.
- **Always** inspect your Game Lift before each use to ensure all components are secure and in good working order.
- **Never** exceed the maximum capacity of 500 lbs.
- **Never** use your Game Lift for anything other than its intended purpose.
- **Do Not** use this product under the influence of alcohol, medication, illegal substances or any mind altering drug.
- **Never** let children play or use this product. This is not a toy!
- Store your Game Lift in a clean, dry place, away from solvents, chemicals or other materials that could damage any of the components.
- Keep these instructions in a safe location for future reference.

For prompt replacement of any missing or damaged parts, please call Direct Outdoor Products at: 877-284-9005 (reference model # 02-MKGMLFT-001)

DIRECT OUTDOOR PRODUCTS
11500 South Pipeline Road
Ft. Worth, TX 76040
Phone: 1-877-284-9005
E-mail: customerservice@directoutdoorproducts.com



INSTRUCTIONS

- 1.) Verify all components are present.
- 2.) Assemble the **Winch Assembly** (Item 9) to the **Upper Leg Winch Tube** (Item 5).
- 3.) Pin all the **Upper Leg Tubes** (Item 3 & 5) to the **Bracket Weldment** (Item 2).
 Note: Make sure the Winch is lined up with the pulley brackets.
- 4.) Pull the Cable/Hook Assembly (Item 10) through the pulley brackets, then attach the **Cable Pulley** (Item 10) to the **Bracket Weldment** (Item 2).
- 5.) Pin the **Lower Leg Tubes** (Item 4) to **Upper Leg Tubes**.



Assembly & Helpful Tips

- Make sure the Cable Assembly has some tension on it when winding to the winch.
- Try to evenly wind the cable to the winch spool.

Automatic Brake Adjustment

- Before applying a load to the winch, verify that the Brake Tension is adjusted properly.
- If the cable can be easily pulled causing the winch to unwind, the tension needs to be tightened.

Brake Tension Nut is Behind Handle

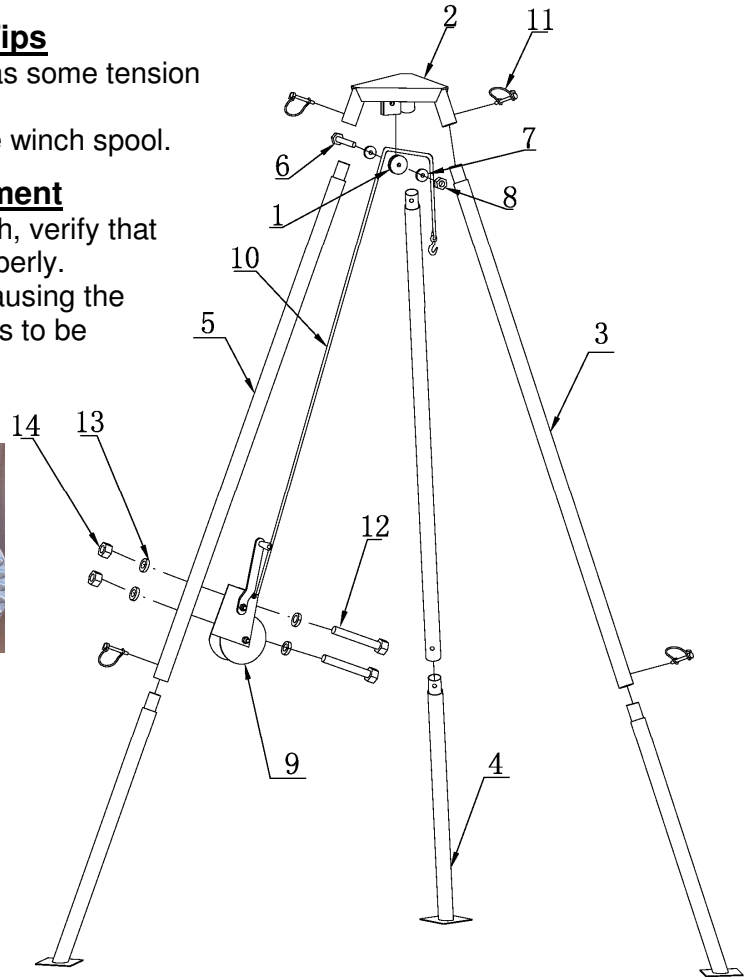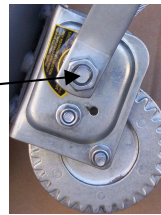

02-MKGMLFT-001

Item	Part #	Description	Qty.
1	MK043-3002	CABLE PULLEY	1
2	MK043-3200	BRACKET WELDMENT	1
3	MK043-3400	UPPER LEG TUBE	2
4	MK043-3500	LOWER LEG TUBE	3
5	MK043-3600	UPPER LEG WINCH TUBE	1
6	10120402B	M12 x 40mm HEX HEAD BOLT	1
7	30120002B	12mm FLAT WASHER	2
8	41120002B	M12 LOCK NUT	1
9	91046001W	WINCH ASSEMBLY	1
10	91046002W	CABLE/HOOK ASSEMBLY	1
11	HE022-2403	PIN W/ CLIP 8mm x 50mm	6
12	10100602B	M10 x 60mm HEX HEAD BOLT	2
13	30100002B	10mm FLAT WASHER	2
14	41100002B	M10 LOCK NUT	2

LIMITED WARRANTY POLICY

Limited Warranty Periods

- **Hunting Equipment:** 1 Year (12 months) from the date of purchase.
- **Trailer Products:** 1 Year (12 months) from the original date of purchase.
- **Hydraulic Cylinders, Rams, Hose Assemblies, and Fittings:** 2 Years (24 months) from the date of purchase.
- **Sub-component Items:** Many sub-component items are warranted separately by the respective manufactures and are covered by warranty of their manufacturer. Examples of such items may include safety harnesses and tie-down systems, wheels, tires, axles, bearings, lights, straps, chain, hardware and like items. The sub-components original manufactures product warranty supersedes and takes precedence over this limited warranty policy.

NOTE: ALL WARRANTY CLAIMS MUST BE PREAPPROVED BY THE MANUFACTURER (THE COMPANY) TO BE VALID.

Products are warranted to be free of defects in materials and/or workmanship for the warranty period. Under this limited warranty, the Company shall be limited to repairing or replacing, at its option, for the warranty period, those parts returned to the factory, freight prepaid, which in the opinion of the Company shall prove to be defective in materials or workmanship, under normal use and service. This warranty will not apply unless the product is installed, used and maintained in accordance with the Manufacturers installation, operation and maintenance instructions.

This warranty applies to the **ORIGINAL** purchaser only, and is non-transferable. The Company warrants the products to be free of defects in material and workmanship but, does not cover normal maintenance or adjustments, damage or malfunction caused by: improper handling, installation, abuse, misuse, negligence, carelessness of operation or normal wear and tear. In addition, this warranty does not cover equipment when repairs or alterations have been made or attempted without the express written consent of the company. Product repairs not covered by the warranty, and product updates, will be provided at the prevailing rate.

The Company is not responsible for damage caused by accident, negligence, abuse, overloading, misapplication, or misuse of the products. It is solely the purchaser's responsibility to determine the suitability of these products for the particular application. **Limitations:** All other obligations or liabilities, including incidental or consequential damages or contingent liabilities arising out of the failure of any parts to operate properly are hereby excluded, including but not limited to any damages resulting from loss of use, inconvenience, loss of time, commercial loss, or any other type of damages general or specific, foreseen or unforeseen, unless applicable state law provides otherwise.

THIS WARRANTY IS EXCLUSIVE AND IS LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR ANY IMPLIED WARRANTY OF FITNESS FROM A PARTICULAR PURPOSE, AND ALL SUCH IMPLIED WARRANTIES ARE EXPRESSLY EXCLUDED.

THE REMEDIES DESCRIBED ARE EXCLUSIVE AND IN NO EVENT SHALL THE COMPANY, NOR ANY SALES AGENT OR OTHER COMPANIES AFFILIATED WITH IT OR THEM, BE LIABLE FOR SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OF OR DELAY IN PERFORMANCE OF THIS WARRANTY. THIS INCLUDES, BUT IS NOT LIMITED TO, LOSS OF PROFIT, RENTAL OR SUBSTITUTE EQUIPMENT OR OTHER COMMERCIAL LOSS.

This warranty shall be governed by the laws of the State of Texas, and shall be subject to the exclusive jurisdiction of the Court in the State of Texas in the County of Tarrant.

RETURNS: Products may not be returned without written approval (Return Material Authorization) from the Company.